



# Disassembling Kodak Easyshare C813 Back Cover

Written By: Susan Marano



## INTRODUCTION

This tutorial demonstrates how to remove the back cover from the camera

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Turn off camera by firmly pressing the power button that is located on the top of the camera near the selector dial.

## Step 2



- Press thumb firmly on battery door and slide it in the direction of the arrow.
- Lift thumb allowing the door to swing open.



## Step 3 — Back Cover



- Before removing back cover, it is advisable to use an [anti-static wrist strap](#) to prevent damage to electronics.

## Step 4



- Turn the camera off by firmly pressing the power button located on top of the camera.

## Step 5



- Locate the 7 screws holding the back cover on.
- Three screws are located on the bottom of the camera.
- Two screws are located on the side shown in the photograph.
- Two final screws are located on the opposite side shown in the photograph.

## Step 6



- Remove all 7 screws:
  - Hold the camera firmly with one hand so that you can still see a screw.
  - Place the Philips 00([Found here](#))screwdriver into the screw.
  - Turn the screwdriver to the left until it is free.
  - Repeat for the remaining screws.



## Step 7



- Use [plastic opening tools](#) to slightly open the side of the case.
- Insert a plastic opening tool and apply pressure to the internal three tabs at the top.
  - The first two are near the words "3X Optical Zoom".
  - The third is near the shutter button.

## Step 8



- Gently pull apart the back cover from the rest of the camera.
  - Make sure there are no more screws or tabs keeping the cover on.
  - Use the plastic opening tool to separate any sides still closely connected.